

GENERAL NOTES:

- **1.** Refer to Radial Timber installation guides for further installation information (www.radialtimbers.com.au)
- 2. Do not scale Drawings. If drawings are in question or discrepancy, the builder shall be responsible for obtaining clarification from the building designer and or building surveyor before continuing with construction.
- **3.** All dimensions relating to existing conditions shall be field
- 4. Where otherwise specified all products shall be installed according to Radial Timbers specifications. This applies not withstanding any relevant Building Act, Regulation, Building Code of Australia, Local Government Regulation/Requirement and Australian Standard.
- 5. All external timbers to be treated against weather exposure to current AS 1604 specifications or no less than durability Class 1 In-Ground/Class 2 Above Ground as per AS 5604 Timber Natural Durability Ratings.
- 6. All Residential timber framing, bracing & tie downs are to be in accordance to AS 1684 (Commercial construction specifications to be provided by Engineer).
- 7. Compliance with the relevant National Construction Code Of Australia (NCC) Volume 1 & or Volume 2 is mandatory **GUIDE TO STANDARDS & TOLERANCES.**
- Timber Cladding & Flashings to wall openings Openings in external wall cladding exposed to the weather must be flashed as per NCC requirements.
- **9.** Compliance with the following Australian Standards is

AS 1684 TIMBER FRAMED CONSTRUCTION AS 5604 NATURAL TIMBER DURABILITY AS 3959 CONSTRUCTION IN BUSHFIRE AREAS AS 2796.1 TIMBER HARDWOOD -AS 2047 WINDOWS IN BUILDINGS AS 2870 RESIDENTIAL SLABS & FOOTINGS AS 2311 PAINTING OF BUILDINGS AS 3600 TERMITE MANAGEMENT AS 1170 STRUCTURAL DESIGN ACTIONS

10. All underground services (Sewer, Drainage, Gas, Electric, telecommunications, etc;) to be determined on site & from relevant authority records, prior to commencement of any

DETAILS INDICATED MAY NOT ALIGN WITH SPECIFIC STRUCTURAL ELEMENTS AND ARE INDICITIVE OF HOW RADIAL TIMBER PRODUCTS ARE TO BE GENERALLY INSTALLED. THE BUILDER SHALL CHECK AND VERIFY ALL DIMENSIONS AND CONSTRUCTION METHODS WITH THE DESIGNER AND NOTIFY ALL ERRORS AND OMISSIONS TO THE DESIGNER. DRAWINGS ARE NOT TO BE USED FOR CONSTRUCTION UNTIL ISSUED BY THE DESIGNER FOR CONSTRUCTION. DO NOT SCALE DRAWINGS. USE FIGURED DIMENSIONS ONLY.

> RADIAL TIMBER SALES 12 PARK DRIVE, DANDENONG SOUTH, VICTORIA 3175 **PH:** (03) 9768 2100 **EMAIL:** sales@radialtimbers.com.au WEB: www.radialtimbers.com.au

Radial Natural Edge Weatherboard External & Internal

SCALE:	A2 - Not To Scale	DWG NO:	NE03
DATE:	15/09/2022	REVISION:	7